

PROGRAMMING YOUR **EZ-FIND!**® PET TAGS

Option 1: Quick Programming (No text entry)

1. Turn the "EZ-Finder" ON by pressing and holding the **FIND** button. "EZ-Finder" will be displayed on the LCD screen.
2. Press **FIND** again to view menu.
3. The item "1" on the menu will be displayed.
4. Take one of the Pet Tags provided in this package and the screw driver to unscrew open the back cover. Remove the insulator tab. The tag will beep once.
5. Press the **FIND** button and the Pet Tag will beep twice indicating it has received its identity.
6. The Pet Tag is now item "1" on your "EZ-Finder" menu.
7. Replace the back cover of the pet tag and tighten the screws.
8. Repeat for as many pet tags as you choose.
It is recommended that you place a number label on each **EZ-Find!**® tag as it is programmed.

Option 2: Programming for Personalization (Text Entry)

This feature allows you to personalize your **EZ-Find!**® system by entering descriptions for each tagged item stored in the EZ-Finder menu.

To add text or numbers adjacent to the number on the "EZ-Finder" menu:

1. Turn "EZ-Finder" ON by pressing and holding the **FIND** button. "EZ-Finder" will be displayed on the LCD screen.
2. Press the blue "**E**" (Entry) button. ("1" will flash on the LCD display. The EZ-Finder is now in program mode)
3. Scroll to menu item (number) that you want to personalize.
4. Press the **FIND** button again and a flashing ? will be displayed.
5. To add/enter alphanumeric text, scroll up or down to the

text/number/symbol you wish to enter. If you want to delete already entered alphanumeric text, press the "**E**" button for each alphanumeric character you want deleted.

6. Press the **FIND** button again to select entry.
7. Repeat steps 5 and 6 for up to 12 characters.
8. Take one of the **EZ-Find!**® Pet Tags provided in this package and the screw driver to unscrew open the back cover. Remove the insulator tab. The tag will beep once and is now ready to assume its identity.
9. Press the **FIND** button and "PROGRAM?" will be displayed.
10. Press the **FIND** button again and the entry will flash.
11. After the flashing stops, Press the **FIND** button and the selected tag will beep several times and will continue to beep for a few seconds. Your pet tag is now personalized.
12. Replace the back cover of the pet tag and tighten the screws.
13. It is recommended that you place a number sticker on each **EZ-Find!**® Pet Tag as it is programmed.
14. Repeat steps 2-13 for each additional Pet Tag. Up to 25 Pet Tags or **EZ-Find!**® tags in total may be programmed.

* If you do not want to program the menu item, press "**E**" on the "EZ-Finder" and the display will revert back to Line "1" of the menu .

* If you want to reprogram a pet tag that has already been programmed, open the back cover, remove the battery and replace it again (beep once), select one item on the EZ-Finder and press **FIND** to designate the new ID to the tag as in the preceding instructions (for both text and no text entries).

* You have to reprogram the tag every time the battery has been replaced.

The complete instruction manual for the **EZ-Find!**® system may be downloaded on www.ez-find.com